RS232-C Serial Interface Card

Installation Instructions

RS232-C Serial Interface Card Part Number: 70042701

1. *Unpack the serial card and remove any shipping materials.*
2. *Turn off the printer and remove the power cord and interface cable.*
3. Remove the access panel screw.

4. Lift off the access panel.

5. Install the Serial Interface Card:

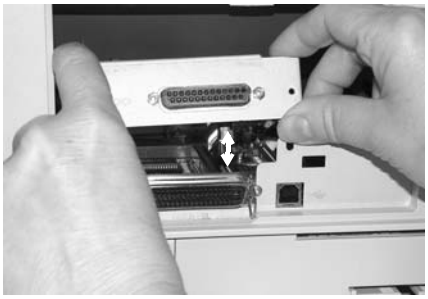

   a. Align the connector at the bottom of the card with the connector on the main board. *It helps to align the screw holes (1) to position the card correctly.*

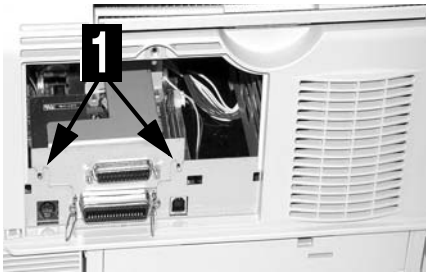

   b. Press the card down until the connectors are fully engaged and the card is securely installed.

6. Insert and tighten the screws (1).

7. Replace the access panel:
   a. Snap off the breakout tab.

   b. Align tabs at panel bottom with holes in printer frame.
   c. Swing panel up and into place.
   d. Replace the screw.

8. Verify Installation:

Print a MenuMap-

   a. Press the Menu button one or more times until INFO.MENU appears on the display.
   b. Press SELECT twice. The MenuMap prints.
   c. RS232C MENU should appear in the second column. If it isn't there, check to be sure that the card is installed correctly.

To change RS232-C settings:

See the User's Guide on the CD included with your printer for instructions to select interface settings in the printer Menu.

OKI®
Oki Data Americas, Inc., Mt. Laurel, NJ 08054
http://www.okidata.com

58366401